


You will need to drill a hole where indicated in photo to expose the metal pin. After drilling the hole, draw the pin away from the centre of the wheel, simultaneously pulling the wheel off the axle. It can then be re-attached later by just pushing it back on.

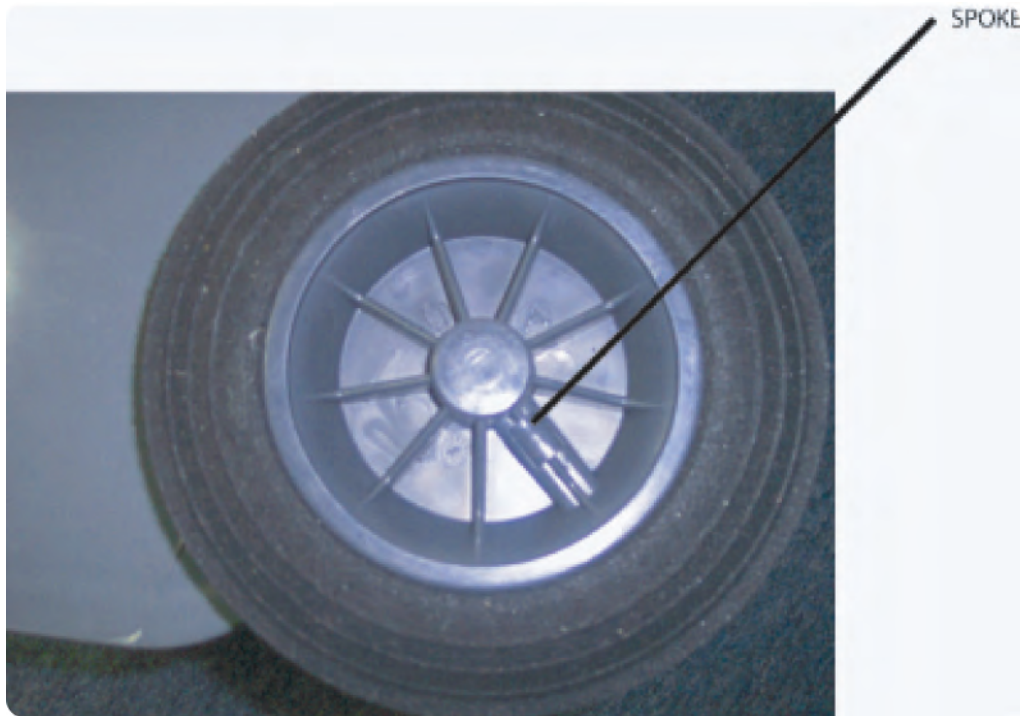

Tool required:

